OfficestoGo

Assembly Instructions
MODEL NO.: SL7136DI

"D" Island

LO2/08-22

CONC10	CONC11	DOWEL	GLIDE	TUN013LB	TUN018SC	TUN015BG	PLASTIC CAP
A	B	C	D	E	F	G	H
							
Cam Lock Pin 9Pcs+2Pcs	Cam Lock 9Pcs+2Pcs	Dowel 5Pcs+1Pcs	Glide 4Pcs	L-Bracket 2Pcs	Screw #4*⅝" 12Pcs+3Pcs	Screw #5*½" 4Pcs+1Pcs	DEEP CAMLOCK CAP 9Pcs+2Pcs


STEP1


IMPORTANT:

FUNCTION OF CAM

1/4 RIGHT TURN FOR LOCKING


MAKE SURE THE ARROW IS POINTING UPWARDS BEFORE INSERTING INTO THE PANEL'S HOLE.

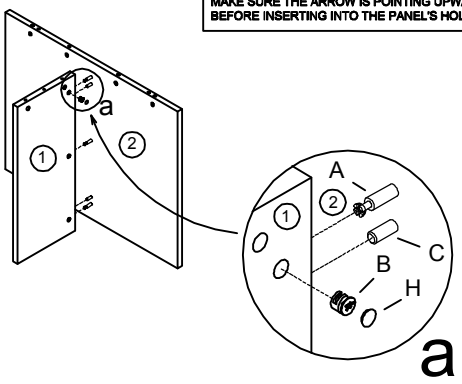

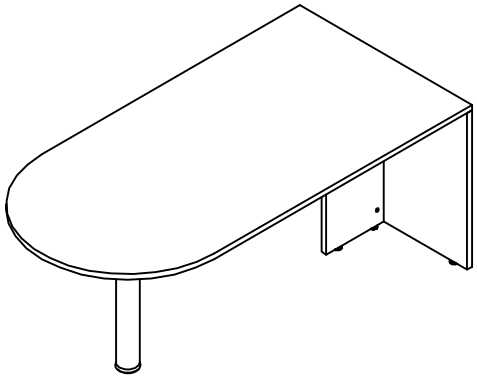

COMPLETED ASSEMBLY

STEP2

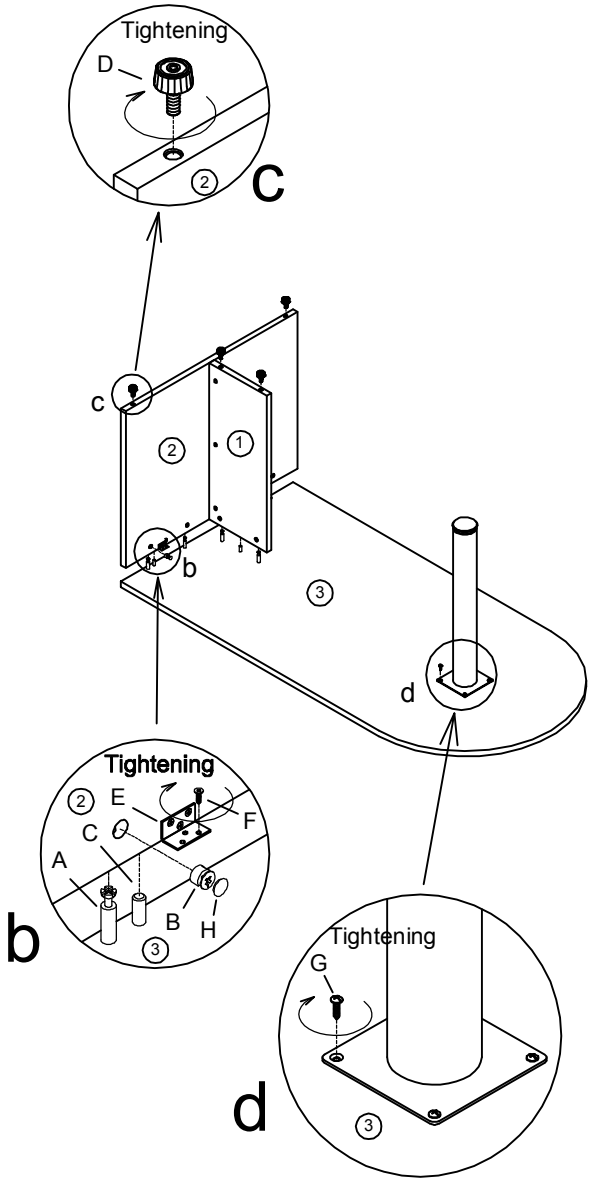

IMPORTANT NOTE:

·It is advisable to assemble unit on a carpet to avoid scratch.
·Check to be sure that you have all parts and hardware.
·Don't tighten all screws/bolts until all completely assembled.
·It is recommended to require 2 persons to complete the assembling.